

gresham house

3250 Ridgeway Dr. Unit 6  
Mississauga, Ontario  
L5L 5Y6  
P 905 412 0362  
F 905 412 0365



## Rose Chair– 40" long



### Standard Features:

Seam only with 7.5" Pullover Arms

Tight Pullover Back

Loose Box Seat (Seam): Standard

Kidney Cushion (Seam): Feather

Seam on inside back

**Show-wood:** Applied #0109 Bun Leg

**Wood Species:** Maple

**COM required:** 9 Yards (plain Fabric)

Note: see guide for required patterned fabric

**COL required:** 153 sq ft

**Available options (see Guide):**

nail head, top stitch

### #7252-24 Chair (As Shown)

Outside Dimensions: 40"W x 39"D x 38.5"H

Inside dimensions:

Seat Depth: 17.5" Seat Width: 22"

Seat Height: 18" Arm Height: 26"

Back Height: 38.5"

### #7252-22 Ottoman

Outside Dimensions: 22"W x 22"D x 17"H

Inside dimensions:

Seat Depth: 22" Seat Width: 22"

Seat Height: 17"

Please Note: tolerance of 1" is industry standard


Please Note: tolerance of 1" is industry standard

gresham house

3250 Ridgeway Dr. Unit 6  
Mississauga, Ontario  
L5L 5Y6  
P 905 412 0362  
F 905 412 0365



## Rose Ottoman– 22" long

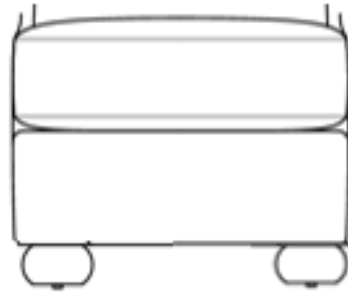

### Standard Features:

Seam only with Semi-Attached Box Top

Seat (Seam): Standard

**Show-wood:** Applied #0109 Bun Leg

**Wood Species:** Maple

**COM required:** 4 Yards (plain Fabric)

Note: see guide for required patterned fabric

**COL required:** 68 sq ft

### Available options (see Guide):

nail head, top stitch

### #7252-22 Ottoman

Outside Dimensions: 22"W x 22"D x 17"H

Inside dimensions:

Seat Depth: 22"

Seat Width: 22"

Seat Height: 17"

Please Note: tolerance of 1" is industry standard